



- F. electrical and gas meters and other mechanical equipment should be located on the rear or side of a building.

MECHANICAL: Illustrations

Screen air conditioning units

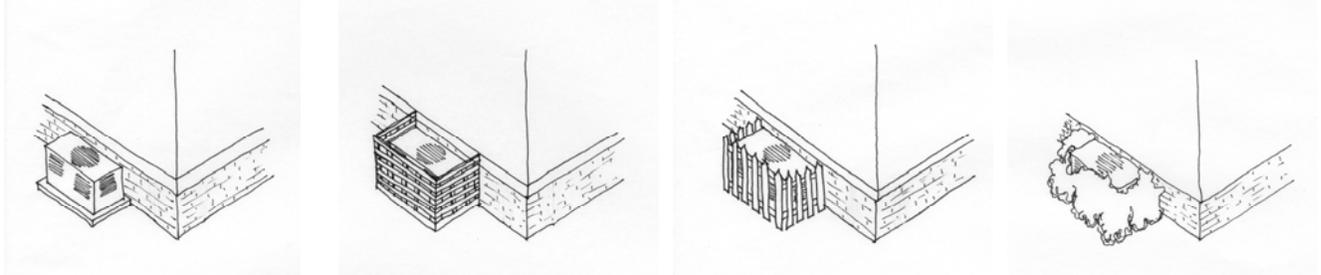

Appropriate placement of solar panels and satellite dish at rear of house

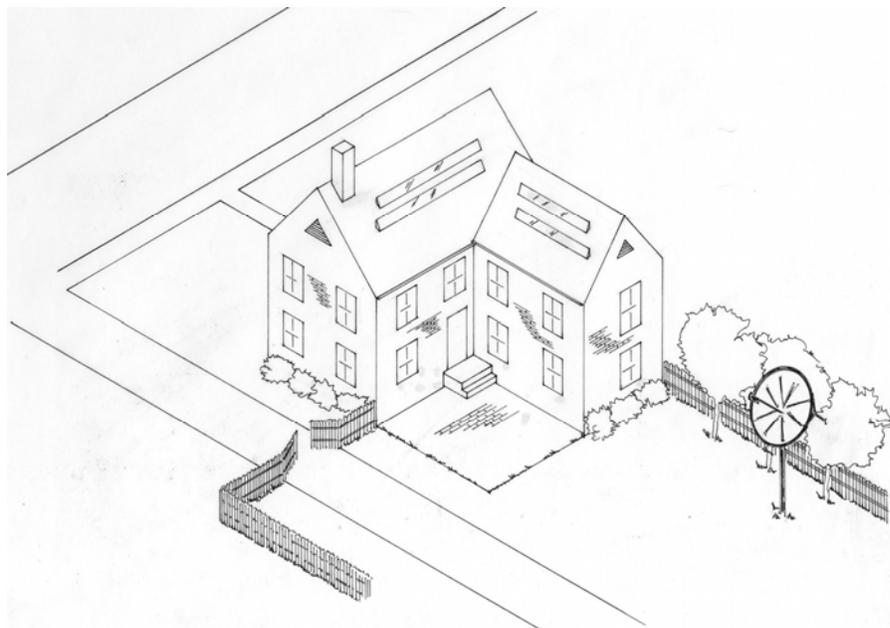

19. MOVING BUILDINGS

Moving buildings is generally considered a last resort to demolition and should be considered only if other means of preservation have failed. If a pre-1939 dwelling within or outside a locally designated district is threatened with demolition, it is appropriate to move the dwelling to one of the District's vacant lots for rehabilitation. A building moved into the Historic District should respect the front and side yard setbacks, orientation, and foundation heights of the neighboring properties.

- A. into the Historic District may be appropriate if compatible with the District's architectural character through style, period, height, scale, materials, setting, and placement on the lot.
- B. that contribute to the historic and architectural character of the District should be avoided unless demolition is the only alternative.